

TRINER SCALE

Rate Chip Installation

Instructions For:

 
<u>Scale Model</u>	<u>Part No.</u>
TS-70PX.....	RC001
TS-70xi	RC030

To install your new Rate Chip:

1. Turn the scale off and unplug the AC adapter from the wall outlet. If the scale is connected to a remote device, unplug that connection also.
2. The rate chip compartment is located on the right side of the scale. If equipped with a Security Plate, remove the two screws and set the plate aside. Use a small flat head screw driver and gently pry open the plastic Rate Chip Compartment Cover.
3. Remove the Rate Chip card by grasping the edges and pulling straight out.

4. Insert the new Rate Chip card. Make sure the card is fully inserted into the slot (the rate card can only be installed in one direction. If it does not fit properly, turn it over and reinsert).
5. Replace the Rate Chip Compartment Cover and, if needed, the Security Plate.
6. Reconnect the AC adapter.
7. Your scale is now ready for use with its new, updated rates.

Triner Scale & Mfg. Co., Inc.
8411 Hacks Cross Road
Olive Branch, MS 38654-4010
TEL: 1-662-890-2385 or
1-800-238-0152

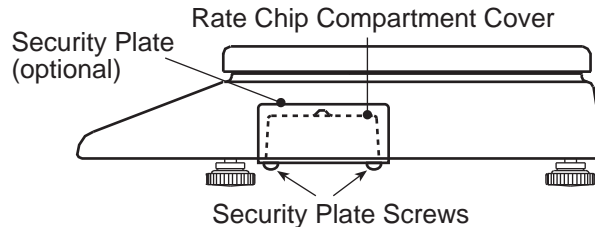

TS-70PX & TS-70xi Primary Services for USPS RATES

Press Key to Toggle:

 
- 1st Class Letter
- 1st Class Flat
- 1st Class Parcel
- Priority Mail
- Priority Flat Envelope, Regular
- Priority Flat Envelope, Legal
- Priority Flat Box, Small
- Priority Flat Box, Regular
- Priority Flat Box, Large

Press Key to Toggle:

- Priority Mail Express
- Priority Mail Express Flat Envelope
- Priority Mail Express Flat Box
- Priority Mail Express AM
- Priority Mail Express AM Flat Envelope
- Priority Mail Express AM Flat Box

(10:30 AM Delivery Fee)

Standard
Post

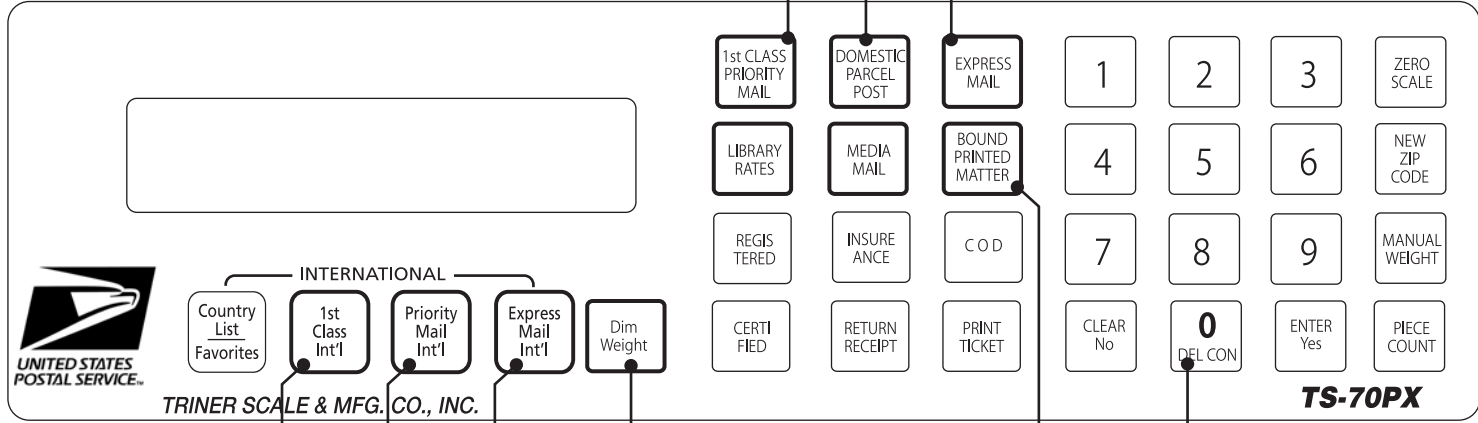

Press Key to Toggle:

- 1st Class Int'l Letter
- 1st Class Int'l Flat
- 1st Class Int'l Parcel

Press Key to Toggle:

- Priority Int'l
- Priority Int'l Flat Envelope
- Priority Flat Box, Small
- Priority Flat Box, Regular
- Priority Flat Box, Large

Press Key to Toggle:

- Priority Mail Express Int'l
- Priority Mail Express Int'l Flat Rate Envelope
- Priority Mail Express Int'l Flat Rate Box

Note: On TS-70xi models, the DEL CON key replaces the PRINT TICKET key