

QUICK START

Using the TS-PFS to Automatically Totalize A Weighing Session

TRINER SCALE
 Model TS-PFS
 PORTABLE FEEDER SCALE




1 Prepare the Scale

Power On → Press the ON key. The scale will perform a brief self-test.

Clear The Total Weight Memory → **PRESS AND HOLD THE RESET KEY UNTIL "RESET" DISPLAYS.** The scale will beep once and show zeros.

Verify Scale's Status → As shown below, view the display to confirm that:
 - No weight is indicated (memory has been reset)
 - Arrows point to AUTO ADD and TOTAL WEIGHT*
 - ZERO and STABLE icons are on.

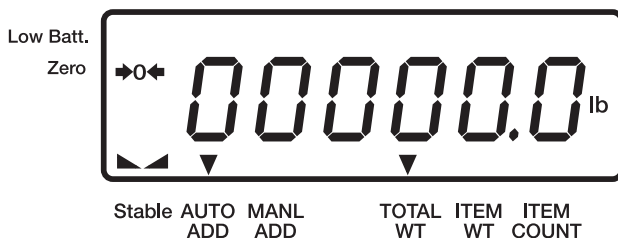

* If not, refer to the Users Guide index for "Setting the Operating Mode"

Triner Scale and Manufacturing Co., Inc.
 8411 Hacks Cross Road
 Olive Branch, MS 38654
 Toll Free: (800) 238-0152
 Tel: (662) 890-2385
 Fax: (662) 890-2386
 Email: info@trinerscale.com
www.trinerscale.com

2 Proceed With Weighing Session

- | | |
|--|---|
| • Place item on scale. | BEEP indicates the item has been weighed and added. |
| • Remove item from scale. | BEEP BEEP indicates the scale is ready for next item |
| • Place next item on scale. The weight will display briefly, then the totalized weight will display. | BEEP indicates the item has been weighed and added. |
| • Continue as above until completed. The display will show the totalized weight, even when the scale is at rest. | Single and double beeps make it unnecessary to constantly check the display to confirm the scale's status |

If for any reason the scale does not return to "Zero" during a weigh session (as indicated by a single beep), the scale will not proceed with the session. If this occurs, press the Zero key (with nothing on the platform), then proceed as usual.

NOTE: If the scale powers off, simply turn back on to continue, or to view the totalized weight of the session.

Be sure to read the TS-PFS User's Guide to become familiar with all of the scale's features and functions.