

# TRINER SCALE

## Rate Chip Installation


### Instructions For:

<u>Scale Model</u>	<u>Part No.</u>
TS-30.....	RC003
TS-32.....	RC007
MG-30 .....	RC020
SPS-30 .....	RC010

### To install your new Rate Chip:

1. Turn the scale off and unplug the AC adapter from the wall outlet. If the scale is connected to a remote device, unplug that connection also.
2. Gently turn the scale over and locate the Rate Chip Compartment, which is covered by a small plate. (See drawing at right)

3. Remove the Rate Chip Compartment cover by removing the screws.
4. Remove the old Rate Chip. Tabs on the chip facilitate removal. You may use your fingers to pry the Rate Chip out, or gently pry out using a flat blade screwdriver.
5. Install the new Rate Chip in the socket by pressing gently until it is completely seated in the socket. The socket will only allow installation in one direction.
6. Replace the Rate Chip Compartment cover and mounting screw. Return scale to its upright position.
7. Reconnect the AC adapter.
8. Your scale is now ready for use with its new, updated rates.

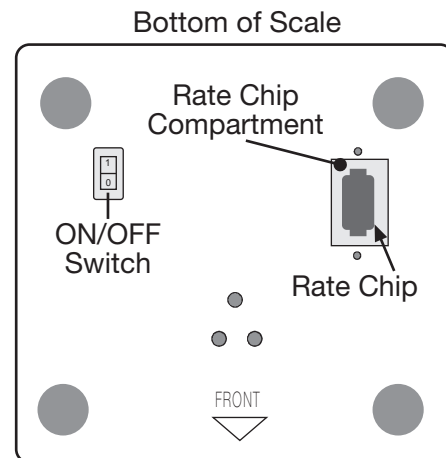

Triner Scale & Mfg. Co., Inc.  
8411 Hacks Cross Road  
Olive Branch, MS 38654-4010  
TEL: 1-662-890-2385 or  
1-800-238-0152