

TRINER SCALE


Rate Chip Installation

Instructions For:

<u>Scale Model</u>	<u>Part No.</u>
TP-10	RC033

To install your new Rate Chip:

1. Turn the scale OFF and unplug the AC adapter from the back of the scale.
2. Gently turn the scale over so that the bottom of the scale is facing up (see drawing at right).
3. Remove the Rate Chip Compartment Cover.
4. Remove the old Rate Chip. Be sure to pull the chip straight out, being certain not to bend the connectors.
5. Install the new Rate Chip in the socket by gently pressing straight in until it is completely seated in the socket. The socket will only allow installation in one direction.
6. Replace the Rate Chip Compartment Cover and return the scale to its upright position.
7. Reconnect the AC adapter. Your scale is ready for use with its new, updated rates.

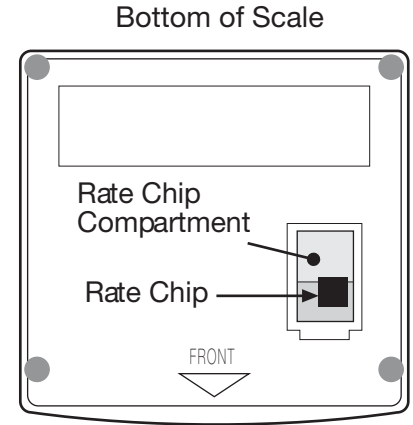

Triner Scale & Mfg. Co., Inc.
8411 Hacks Cross Road
Olive Branch, MS 38654-4010
TEL: 1-662-890-2385 or
1-800-238-0152